


# WASHER LOADING GUIDE


To get the best results and avoid damage to your items, it is important to load the washer correctly:

DO NOT **OVERLOAD**

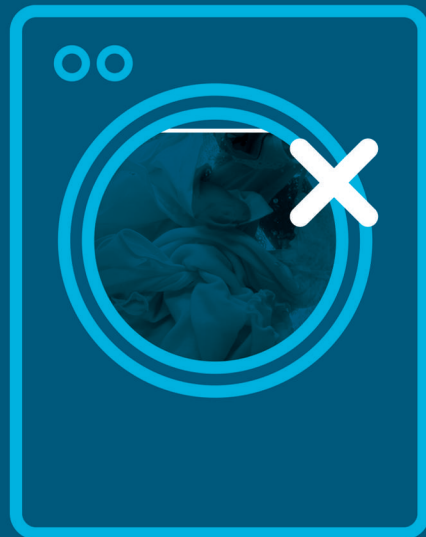


This can cause damage to your items and they may not be washed properly.

DO NOT **UNDERLOAD**

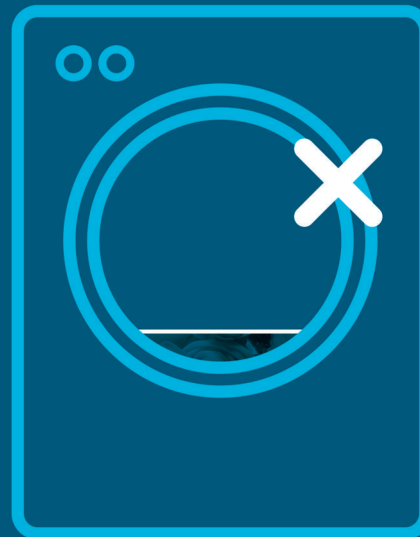

As the washer cannot extract the maximum amount of moisture from very small loads / single items.

DO **LOAD CORRECTLY**

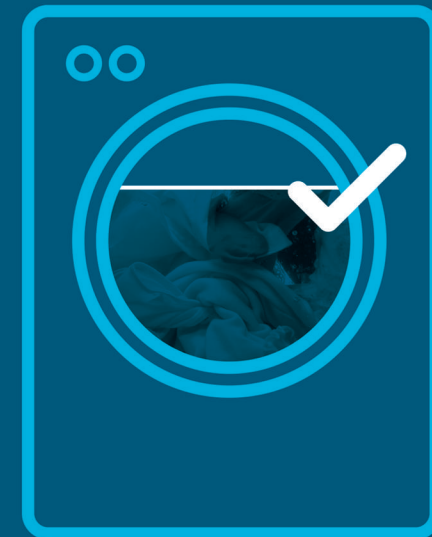

To ensure you get optimum wash results.

**WASHPOINT**  
A DIVISION OF WASHCO